

AK 47/74 - Handguards Installation Instructions

WARNING!

Make sure your Rifle is unloaded before you begin any procedures.

Rifle Disassembly



Fig. 1

Gas Tube and Handguard removal

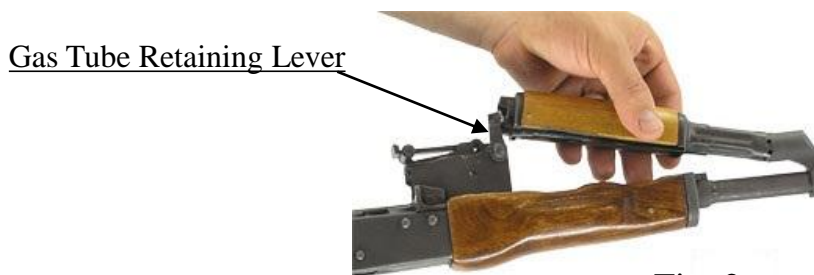


Fig. 2

Rotate the Gas Tube Retaining Lever upward until the Gas Tube can be pulled upward at the back, and off the Rifle (Fig. 2).




Fig. 3



Fig. 4

Using a wrench or a bench vise, gently lock across the flat side portions in back of the Gas Tube.

Grab the Handguard firmly and rotate it around the Gas Tube axis until it is exactly upside-down. Push straight down and off the Gas Tube (Fig. 3, 4).

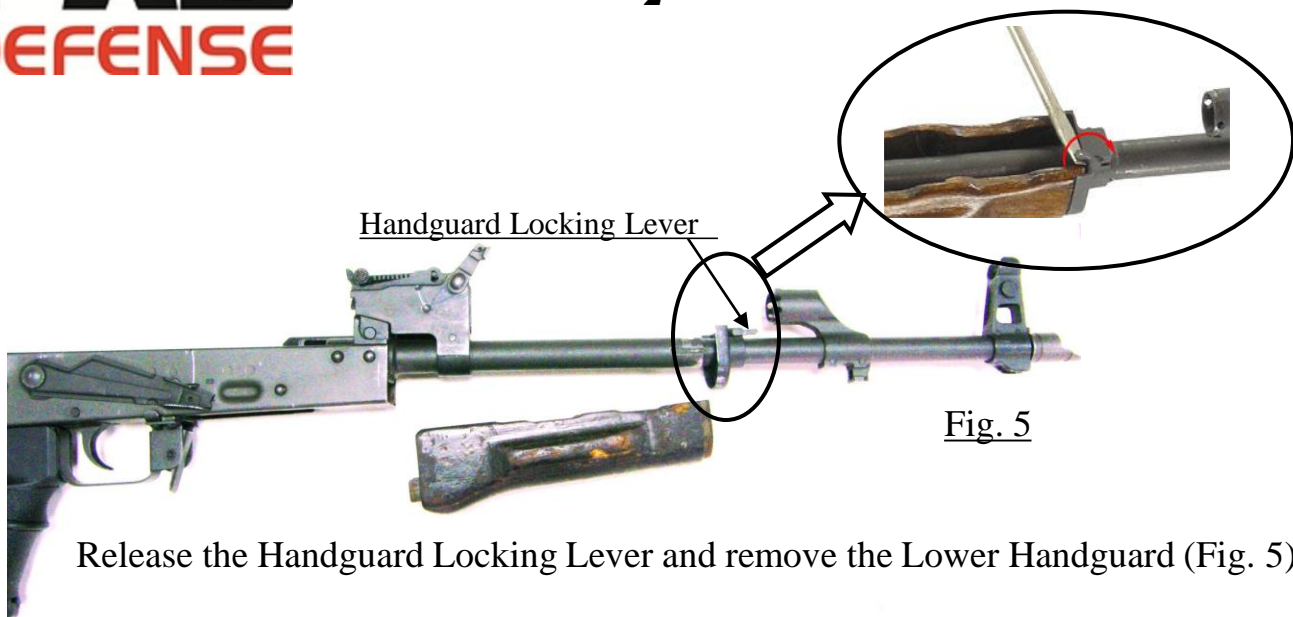


Handguard Locking Lever

Fig. 5

Release the Handguard Locking Lever and remove the Lower Handguard (Fig. 5).

AK 47/74 Handguards Installation

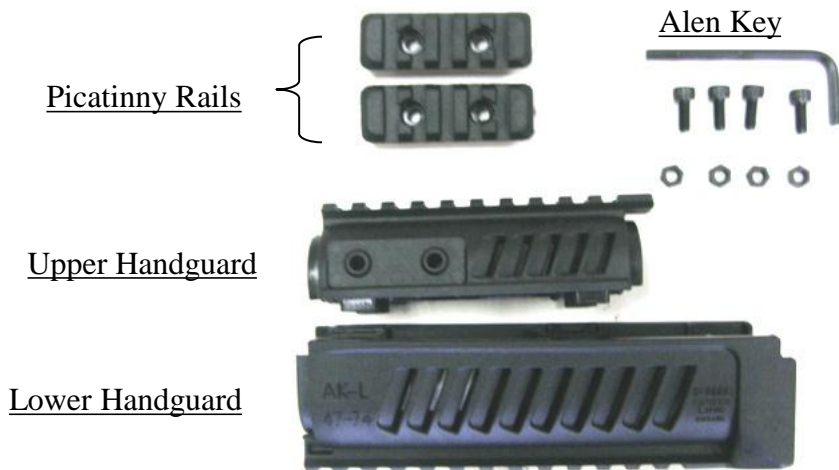

Picatinny Rails

Alen Key

Upper Handguard

Lower Handguard

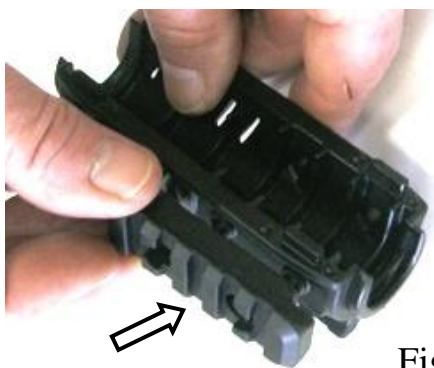


Fig. 6

Step 1. Place the Picatinny Rail on the Upper Handguard (Fig. 6).



Fig. 7

Step 2. Holding the Picatinny Rail, place a Nut into designed for it socket, in the Upper Handguard (Fig. 7).

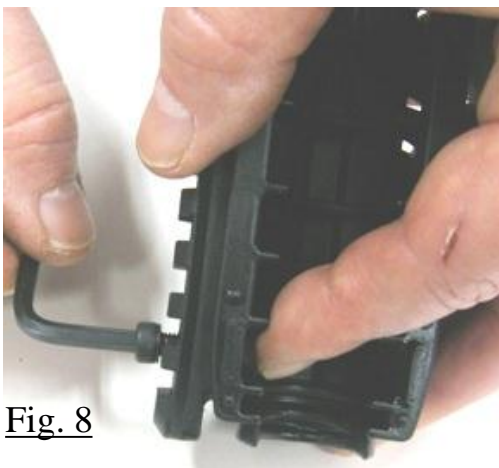


Fig. 8



Fig. 9

Step 3. Holding the Nuts fasten Picatinny Rail's Bolts using the Alen Key (Fig. 8, 9).



Fig. 10



Fig. 11

Step 4. Place the Upper Handguard on the Gas Tube. Using a wrench or a bench vise attach the Upper Handguard to the Gas Tube by turning it 180 degrees (Fig. 10, 11).



Fig. 12

Step 5. Place the Lower Handguard on the Rifle's Receiver (Fig. 12).

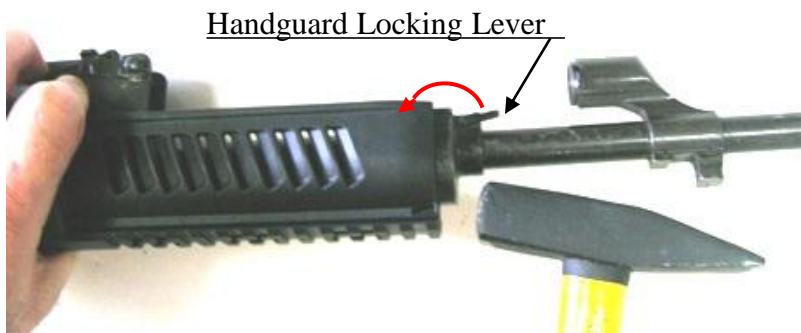


Fig. 13

Step 6. Place the Forend Cap on the Lower Handguard and lock the Handguard Locking Lever by turning it 180 degrees (Fig. 13).

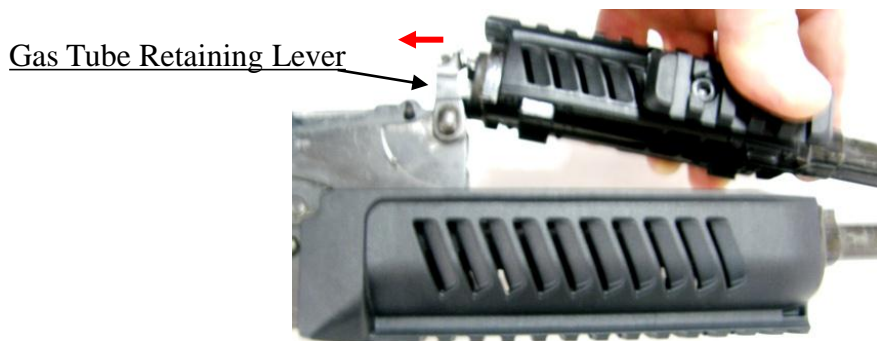


Fig. 14

Step 7. Place the Gas Tube on the Receiver and lock it by turning the Gas Tube Retaining Lever down (Fig. 14).



Fig. 15

Step 8. Assemble weapon (Fig. 15).